

Product Guide Sheet

Battery Changer Beam (FBC)

To use the attachment, ensure that the truck seat, battery cover etc. are tilted out of the way and that there are no obstructions to prevent the battery being lifted. Raise the forks until the attachment is above battery level, allowing clearance to fit the hooks. Drive the truck forwards so that the attachment is between the battery and the overhead guard and positioned centrally along the battery length.

When the attachment is in place, fit the hooks one through each hole in the outer steel casing. In the event of only one hole being available in each end of the casing fit 2 hooks through each end, if hole diameters permit. Failing this ensures that the free legs are back-hooked out of the way. Position hooks to face outwards from the battery.

Our Battery Beams use when clearance between the battery and overhead guard is minimal and the battery sits in a well.



Model Ref.	Capacity	A (Hole Ctrs)	B (Battery Width)	C (Battery Length)	H (Hole Dia)	E (Fork Spread)
FBC-C-1	1000Kg					307mm
FBC-C-2	2000Kg					307mm



Ordering Information:

- ✓ Truck Capacity
- ✓ Fork Width/Thickness
- ✓ Battery Weight
- ✓ Dimensions A, B, C & H

Max Fork Size 140 x 50mm

